

# Bottle opener

## Instruction Manual

Korkenzieher  
Tire-bouchon  
Sacacorchos  
Llevataps



### IMPORTANT SAFEGUARDS

Before using this product for the first time, please take a few moments to read these instructions and keep it for reference.


### READ ALL INSTRUCTIONS BEFORE USE

1. To protect against risk of electrical shock, do not put the electric wine opener in water or other liquid. This may cause personal injury and/or damage to the product.
2. To protect against fire, do not operate the unit in the presence of explosive and/or flammable fumes.
3. Do not use the electric wine opener for other than intended use.
4. This product is intended for normal domestic household use only.
5. When using the electric wine opener keep your workspace clean and free from potential hazards.
6. For indoor use only. Do not expose the electric wine opener to rain or other extreme conditions.
7. Never force the electric wine opener onto a bottle or attempt to speed up the mechanism. The electric wine opener will work best when it is operated at it's intended speed.
8. Do not touch or adjust the electric wine opener's mechanism or the corkscrew spiral. Only hold the electric wine opener by it's plastic housing.
9. Do not attempt to open bottles if the switch is not working correctly.
10. Do not attempt to open the electric wine opener. It has no serviceable parts.

**ATTENTION: CORKSCREW IS SHARP. HANDLE CAREFULLY. KEEP HANDS AND UTENSILS OUT OF THE CONTAINER WHILE OPERATING TO PREVENT THE POSSIBILITY OF SEVERE PERSONAL INJURY AND/OR DAMAGE TO THE PRODUCT OR PROPERTY.**

### Electric wine opener

Stainless steel · Grey · Black

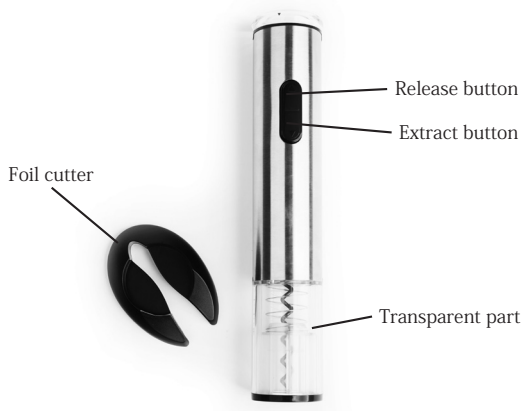

### OPERATING INSTRUCTIONS

1. Open the battery compartment cover and put 4 "AA" batteries into compartment by matching "+" and "-" marks on the battery and compartment. Then close the cover.
2. Before remove the cork you must remove any foil from the bottle using the foil cutter provided.
3. Place the electric wine opener on top of the wine bottle making sure that it remains as upright as possible at all times. If you hold the electric wine opener at an angle to the bottle it will not remove the cork properly.
4. Hold the electric wine opener firmly and press the extract button (down button). The corkscrew spiral will turn in a clockwise direction and enter the cork. Then gradually remove it from the bottle. When the electric wine opener mechanism stop the cork has been fully removed from the bottle.
5. Lift the electric wine opener away from the bottle, to remove the cork simply press the upper part of the switch. The spiral will turn in an counterclock wise direction and release the cork.